


Spring Cover



for Precleaners and Secondary Cleaners

Instructions for Installation



STEP 1. Loosen hose clamp from spring cover assy and remove bushing (Fig. 1).

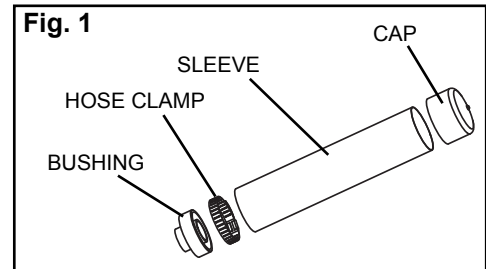

STEP 2. Disassemble tensioner by removing the two nuts, washer, upper bushing, spring, and lower bushing (Fig. 2a - precleaner and 2b - secondary cleaner).

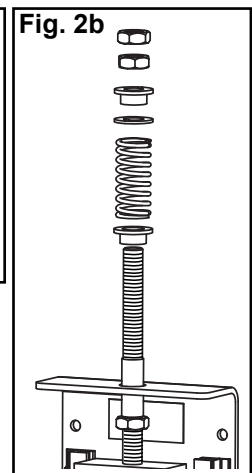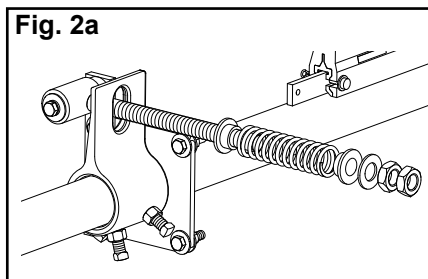



STEP 3. Reassemble tensioner, replacing lower bushing with the bushing supplied with the spring cover assembly. The spring should fit inside the new bushing (Fig. 3a and 3b).

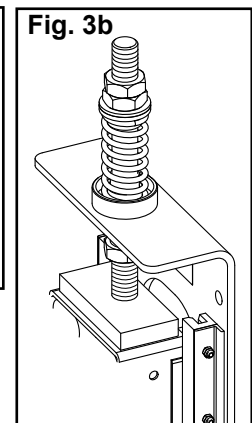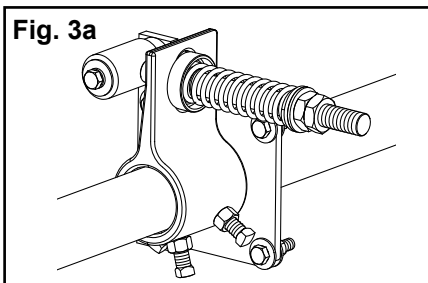

STEP 4. Retension spring to correct tension as shown on cleaner's spring tension label.

STEP 5. Slide spring cover and hose clamp over the spring assembly and new bushing.

STEP 6. Tighten hose clamp to secure the spring cover in place (Fig. 6a and 6b).

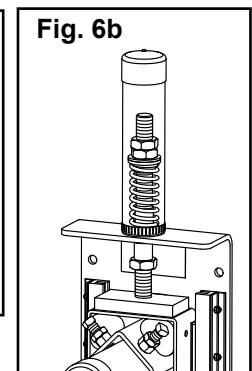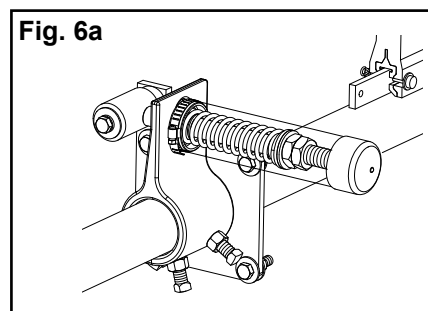

1995 Oak Industrial Dr. NE • Grand Rapids, MI 49505 U.S.A.

Telephone: (616)-459-3196 • Fax: (616)-459-4976 • E-mail: info@flexco.com • Web: www.flexco.com

Australia: 61-2-9680-3322 • China: 86-21-33528388 • England: 44-1274-600-942

Germany: 49-7428-9406-0 • Mexico: 52-55-5674-5326 • South Africa: 27-11-608-4180

©2010 Flexible Steel Lacing Company. 07/10. For Reorder: X1937

